



SERVICE BULLETIN

Classification:	Reference:	Date:
BT04-021	NTB04-064	May 25, 2004

NISSAN; WINDOW REGULATOR/MOTOR SERVICE

APPLIED VEHICLES: All Nissan
APPLIED DATES: 1995 to current date

SERVICE INFORMATION

If you should need to service the window regulator or motor on an Applied model, removing the door window is no longer needed.

See the chart below to find out which revised service procedure in this bulletin applies to the vehicle you are working on.

DOOR WINDOW REGULATOR Procedure Type Application Chart

Series	Model	Front/Rear									
		95	96	97	98	99	00	01	02	03	04
A32	Maxima	A/A	A/A	A/A	A/A	A/A					
A33	Maxima						A/A	A/A	A/A	A/A	
A34	Maxima										B/A
U13	Altima	A/A	A/A	A/A							
L30	Altima				A/A	A/A	A/A	A/A			
L31	Altima								B/A	B/A	B/A
B14	Sentra/200SX	A/A	A/A	A/A	A/A	A/A					
B15	Sentra						A/A	A/A	A/A	A/A	A/A
V40	Quest	A/A	A/A	A/A	A/A						
V41	Quest					A/A	A/A	A/A	A/A		
V42	Quest										A/A
S14	240SX	C	C	C	C						
Z32	300ZX	C	C								
Z33	350ZX									D	D
Z50	Murano									B/A	B/A
WD22	Xterra						A/A	A/A	A/A	A/A	A/A
WD21	Pathfinder	A/A									
R50	Pathfinder		A/A	A/A	A/A	A/A	A/A	A/A	A/A	A/A	A/A
D21	Truck	A/A	A/A	A/A							
D22	Frontier				A/A	A/A	A/A	A/A	A/A	A/A	A/A
A60	Titan										A/A
TA60	Armada										A/A

- A: Door sash + sealing screen type.
- B: Door sash + module (frame) type.
- C: Door sashless + sealing screen type.
- D: Door sashless + module type.

Removal and Installation of Regulator Assembly

TP040380


NOTE:

These procedures are typical way for each type. The procedures differ according to model, so refer to Service Manual for more detail.


If you also remove door glass, refer to Service Manual for procedures.

TYPE-A: DOOR SASH + SEALING SCREEN TYPE (FR/RR)


1. Remove the door finisher assembly.
2. Remove the sealing screen and the door speaker (if equipped).
3. Operate the power window main switch to raise/lower the door glass until the glass mounting bolts can be seen.

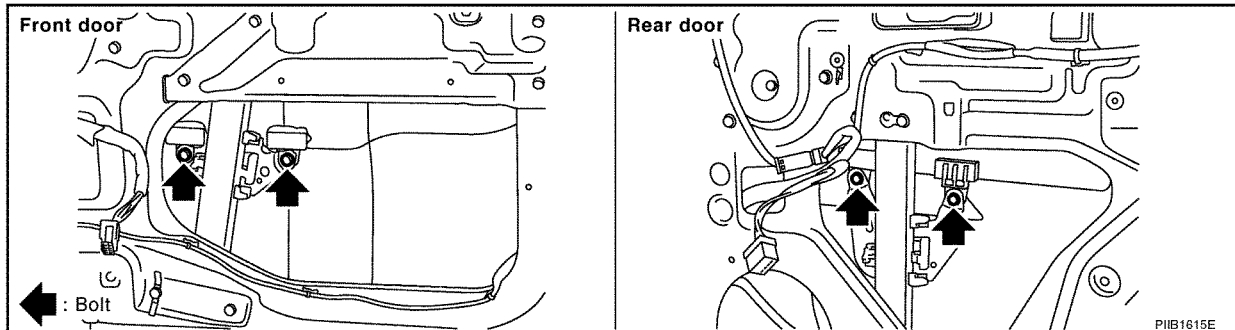

4. Remove the glass mounting bolts.
5. Raise up the door glass and hold with a suction lifter.

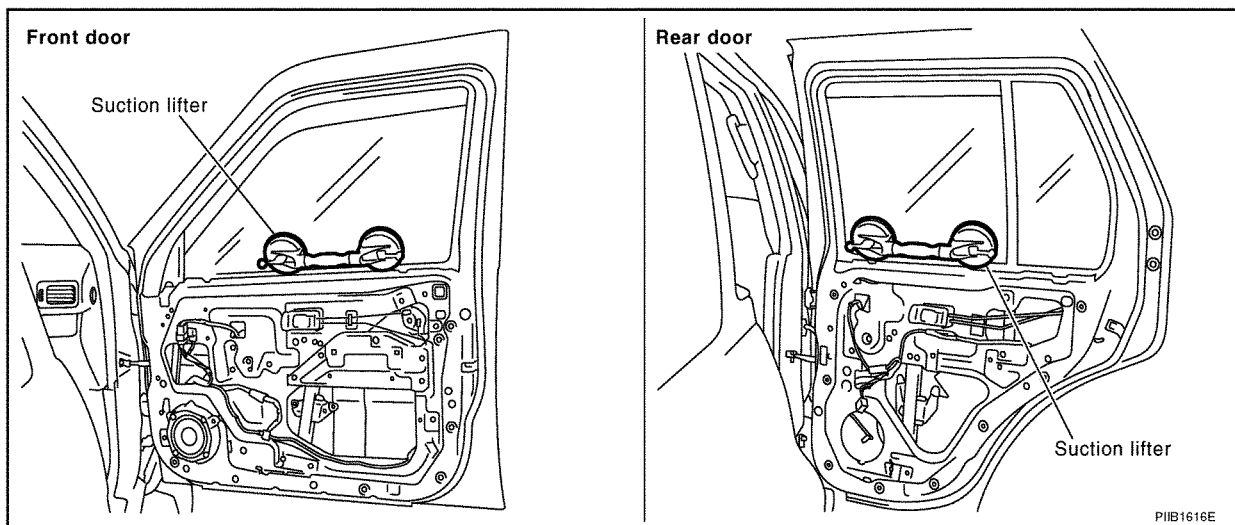

6. Remove the mounting bolts, and remove regulator assembly.
7. Disassemble the power window motor from the regulator.

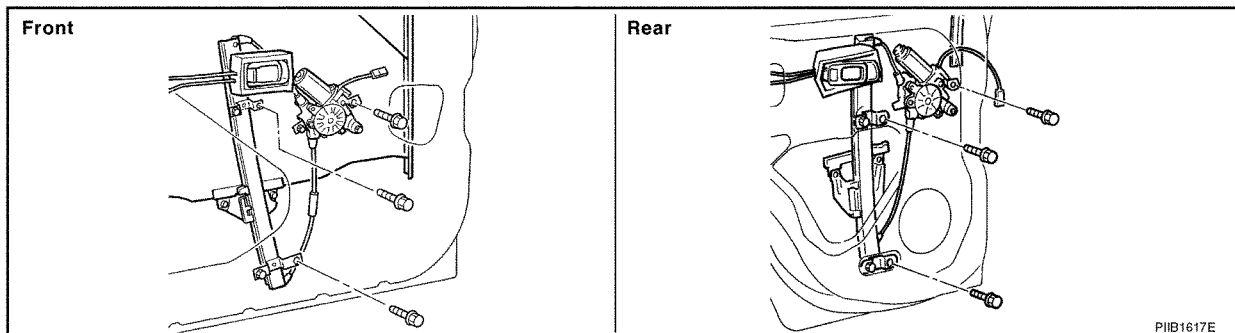

Removal and Installation of Regulator Assembly

TP040381


NOTE:

These procedures are typical way for each type. The procedures differ according to model, so refer to Service Manual for more detail.


If you also remove door glass, refer to Service Manual for procedures.

TYPE-B: DOOR SASH + MODULE (FR)/FRAME (RR) TYPE


1. Remove the door finisher assembly.
2. Remove the door speaker (front door).
3. Remove the frame assembly (rear door).
4. Operate the power window main switch to raise/lower the door glass until the glass mounting bolts can be seen.

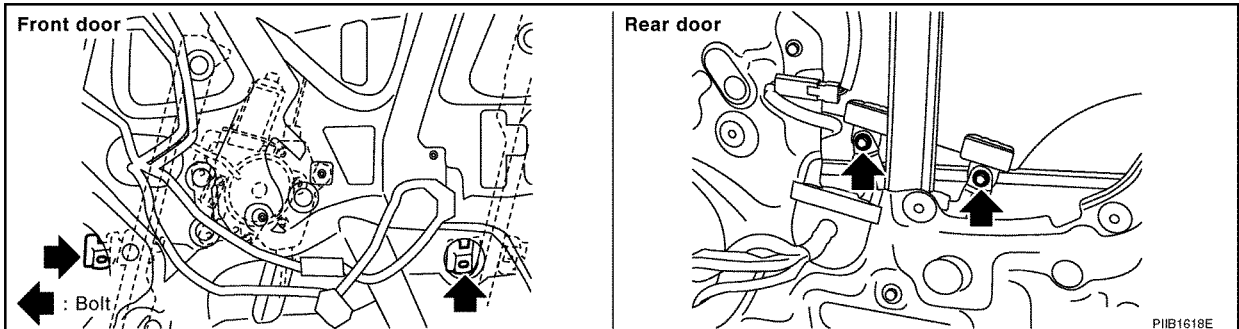

5. Remove the glass mounting bolts.
6. Raise up the door glass and hold with a suction lifter.

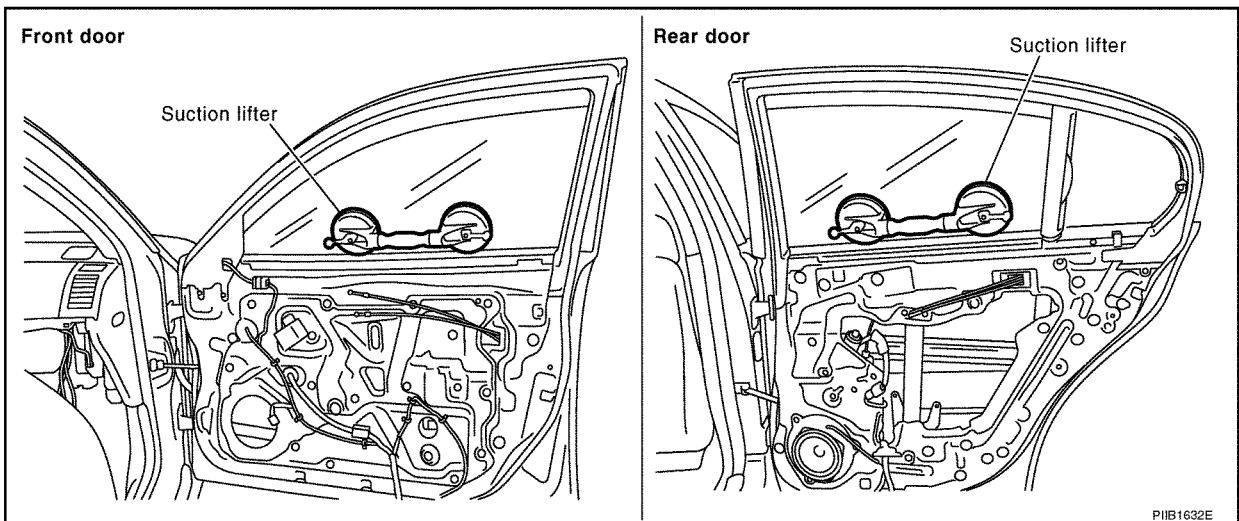

7. Remove the mounting bolts, and remove the module assembly (front door).
8. Remove the door regulator assembly.

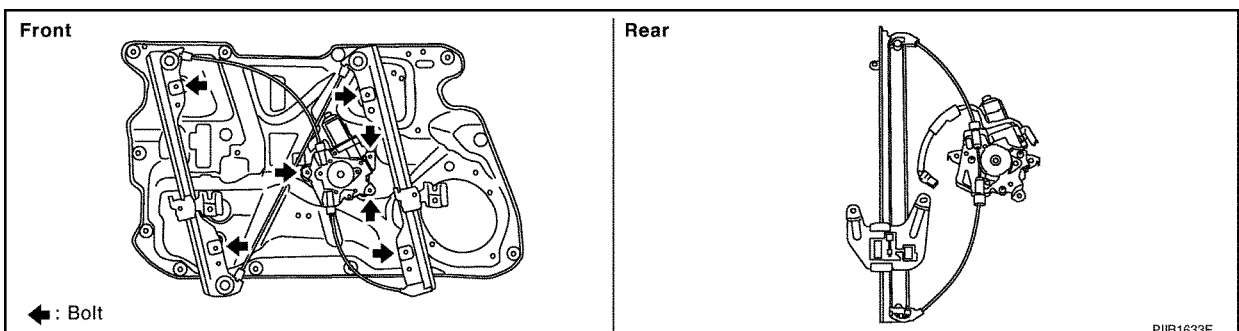

9. Disassemble the power window motor from the regulator.

Removal and Installation of Regulator Assembly

TP040382


NOTE:

These procedures are typical way for each type. The procedures differ according to model, so refer to Service Manual for more detail.


If you also remove door glass, refer to Service Manual for procedures.

TYPE-C: DOOR SASHLESS + SEALING SCREEN TYPE (FR/RR)


1. Remove the door finisher assembly.
2. Remove the sealing screen and the door speaker (if equipped).
3. Operate the power window main switch to raise/lower the door glass until the glass mounting nuts can be seen.

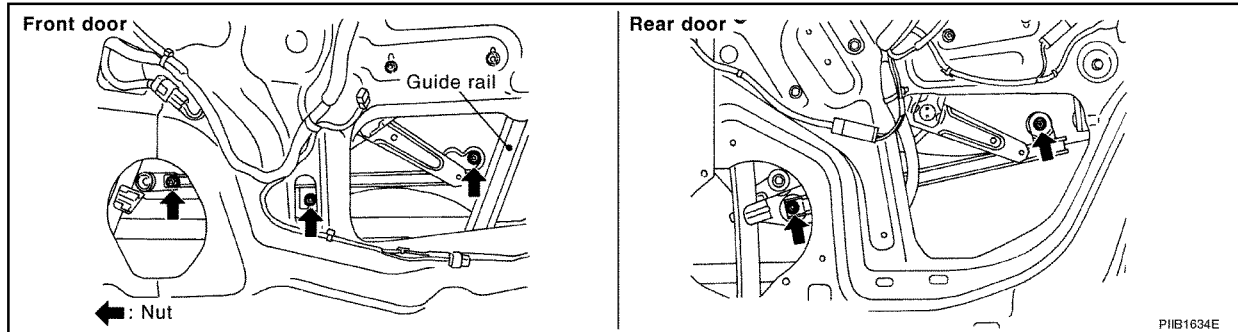

4. Remove the glass mounting nuts.
5. Raise up the door glass and hold with a suction lifter.

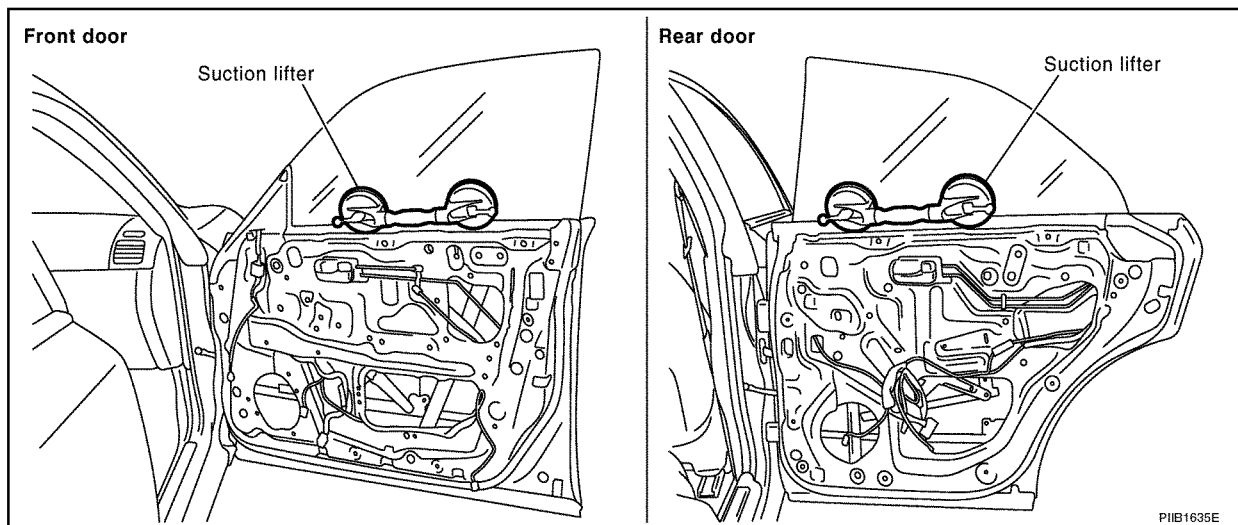

6. Remove the mounting bolts, and remove the regulator assembly.

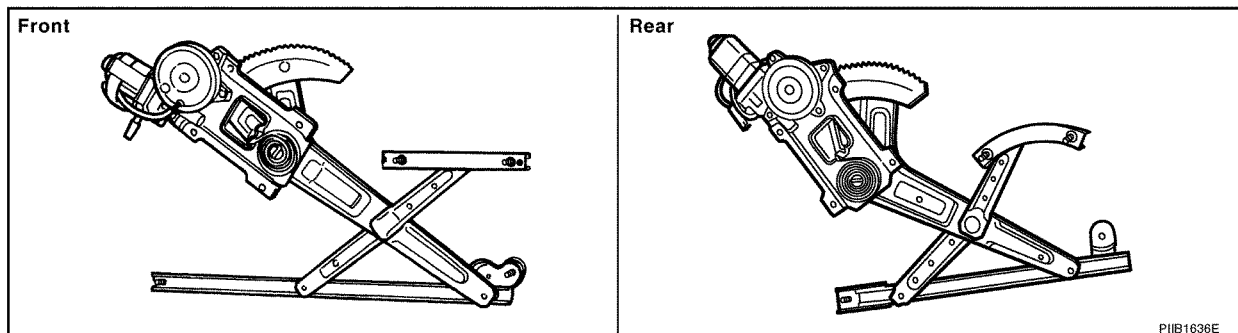

7. Disassemble the power window motor from the regulator.


NOTE:

These procedures are typical way for each type. The procedures differ according to model, so refer to Service Manual for more detail.


If you also remove door glass, refer to Service Manual for procedures.

TYPE-D: DOOR SASHLESS + MODULE TYPE (FR)

1. Remove the door finisher assembly.
2. Remove the harness connector and the door speaker (if equipped).
3. Operate the power window main switch to raise/lower the door glass until the glass mounting bolts can be seen.
4. Remove the glass mounting bolts.

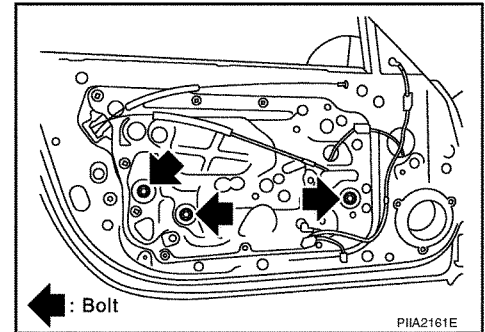

5. Raise up the door glass and hold with a suction lifter.

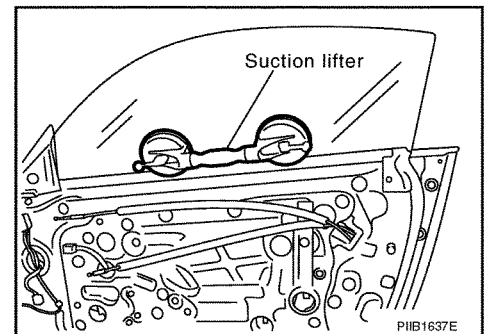

6. Remove the mounting bolts, and remove the module assembly.
7. Remove the door regulator assembly from the module assembly.
8. Remove the power window motor from the regulator.

